

TruWood™ Premium Timber

26"-30", TruWood Premium Timber Kit, Large

Part Number:
TWL-26/30-SP

INSTALLATION GUIDE

TruWood Premium Timber Kit models:
OR26-TRAD, OR30-TRAD, RS-2621, RS-3021.

TruWood Premium Timber Kit includes:

- 8" Large log (1).
- 10" Large logs (2).
- 6" Slim log (1).
- Bag of wood chips (1).

Assembly order

You will need to gain access to the ember bed of your fireplace. Refer to your fireplace manual for instructions for removing the front glass to access the ember bed.

Please Note: This kit is designed to fit multiple fireplace sizes. Your log set might be more spread out for linear fireplaces or more compact for traditional fireplaces. If your fireplace is one of the smaller units this kit is compatible with, you may not need to use all the logs based on the available space of your fireplace.


The placement is what we recommend and what we optimized the set to, but you can have fun with them and place them to your liking. We recommend placing the bark towards the flames for the best appearance and lighting contrast.

1. Ensure the ember bed media (crystals, fireglass, etc.) that came with the fireplace is installed first. If updating an existing fireplace, remove the old logs to accommodate the TruWood logs. Then select the 8" log from the kit and place it in the middle of the fireplace. This will be the base of the TruWood log layout.



Assembly order

2. Select the two 10" logs and rest them on the left and right of the base log. These will create your main stack.

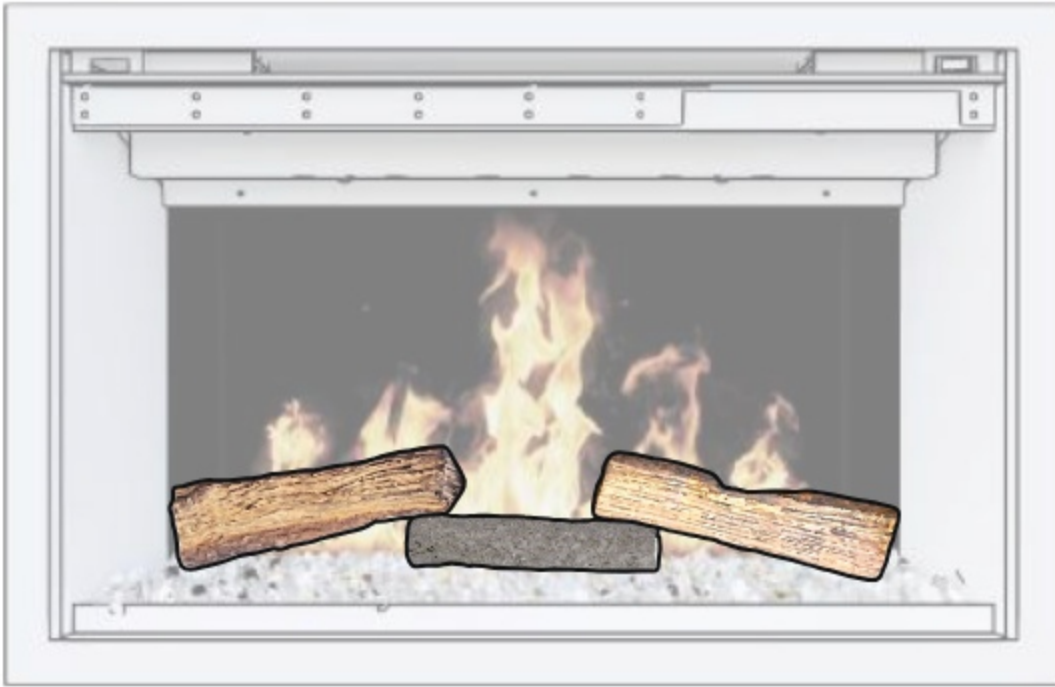

3. Select the 6" slim log and lay it across the main log diagonally.



Assembly order

4. Use the bag of wood chips and place a few chips and chunks in the gaps between the logs. We recommend using these sparingly for the best appearance and to maximize the light output from the ember bed.



26"-30", TruWood Premium Timber Kit, Large installation is complete.

This image shows a blank sheet of white paper with horizontal ruling lines. The lines are evenly spaced and extend across the width of the page. There are no margins, text, or other markings on the paper.

MODERN FLAMES®

ELECTRIC FIREPLACES

Thank you for choosing Modern Flames, we appreciate all our customers and hope you have many years of enjoyment of our products.

Take a look at our other products
from our RPG Brands family of companies



GrandCanyonGasLogs.com

For all your indoor, outdoor gas fireplaces & fire feature products.



WildfireOutdoorLiving.com

For all your outdoor living products,
such as grills, refrigerators and accessories.

RPG BRANDS

MODERN  FLAMES®
ELECTRIC FIREPLACES

EST. IN ARIZONA
WILDFIRE
OUTDOOR LIVING

GRAND  CANYON
GAS LOGS

TruWood™ Premium Timber

36", TruWood Premium Timber Kit, Large

Part Number:
TWL-36-SP

INSTALLATION GUIDE

TruWood Premium Timber Kit models:
OR36-TRAD, RS-3626.

TruWood Premium Timber Kit includes:

- 10" Large log (1).
- 12" Large logs (2).
- 8" Slim log (1).
- 6" Sim logs (2).
- Bag of wood chips (1).

Assembly order

You will need to gain access to the ember bed of your fireplace. Refer to your fireplace manual for instructions for removing the front glass to access the ember bed.

Please Note: This kit is designed to fit multiple fireplace sizes. Your log set might be more spread out for linear fireplaces or more compact for traditional fireplaces. If your fireplace is one of the smaller units this kit is compatible with, you may not need to use all the logs based on the available space of your fireplace.

The placement is what we recommend and what we optimized the set to, but you can have fun with them and place them to your liking. We recommend placing the bark towards the flames for the best appearance and lighting contrast.

1. Ensure the ember bed media (crystals, fireglass, etc.) that came with the fireplace is installed first. If updating an existing fireplace, remove the old logs to accommodate the TruWood logs. Then select the 10" log from the kit and place it in the middle of the fireplace. This will be the base of the TruWood log layout.



Assembly order

2. Select the two 12" logs and rest them on the left and right of the base log. These will create your main stack.



3. Select the two 6" slim logs and lay them under the 12" logs. The inside end of the log will be towards the flame screen and the outside end will be towards you.



Assembly order

4. Select the 8" slim log and lay it across the main log diagonally.



5. Use the bag of wood chips and place a few chips and chunks in the gaps between the logs. We recommend using these sparingly for the best appearance and to maximize the light output from the ember bed.



Assembly order



36", TruWood Premium Timber Kit, Large installation is complete.

MODERN FLAMES®

ELECTRIC FIREPLACES

Thank you for choosing Modern Flames, we appreciate all our customers and hope you have many years of enjoyment of our products.

Take a look at our other products
from our RPG Brands family of companies



GrandCanyonGasLogs.com

For all your indoor, outdoor gas fireplaces & fire feature products.



WildfireOutdoorLiving.com

For all your outdoor living products,
such as grills, refrigerators and accessories.

RPG BRANDS

MODERN  FLAMES®
ELECTRIC FIREPLACES

EST. IN ARIZONA
WILDFIRE
OUTDOOR LIVING

GRAND  CANYON
GAS LOGS

TruWood™ Premium Timber

42"-44", TruWood Premium Timber Kit, Large

Part Number:
TWL-42/44-SP

INSTALLATION GUIDE

TruWood Premium Timber Kit models:
OR42-TRAD, RS-4229, LPM-4416V2.

TruWood Premium Timber Kit includes:

- 12" Large log (1).
- 16" Large logs (2).
- 8" Slim logs (3).
- Bag of wood chips (1).

Assembly order

You will need to gain access to the ember bed of your fireplace. Refer to your fireplace manual for instructions for removing the front glass to access the ember bed.

Please Note: This kit is designed to fit multiple fireplace sizes. Your log set might be more spread out for linear fireplaces or more compact for traditional fireplaces. If your fireplace is one of the smaller units this kit is compatible with, you may not need to use all the logs based on the available space of your fireplace.

The placement is what we recommend and what we optimized the set to, but you can have fun with them and place them to your liking. We recommend placing the bark towards the flames for the best appearance and lighting contrast.

1. Ensure the ember bed media (crystals, fireglass, etc.) that came with the fireplace is installed first. If updating an existing fireplace, remove the old logs to accommodate the TruWood logs. Then select the 12" log from the kit and place it in the middle of the fireplace. This will be the base of the TruWood log layout.



Assembly order

2. Select the two 16" logs and rest them on the left and right of the base log. These will create your main stack.



3. Select two 8" slim logs and lay them under the 16" logs. The inside end of the log will be towards the flame screen and the outside end will be towards you.



Assembly order

4. Select the 8" slim log and lay it across the main log diagonally.



5. Use the bag of wood chips and place a few chips and chunks in the gaps between the logs. We recommend using these sparingly for the best appearance and to maximize the light output from the ember bed.



Assembly order



42"-44", TruWood Premium Timber Kit, large installation is complete.



Condensed layout example for Redstone and Orion Traditional Units

MODERN FLAMES®

ELECTRIC FIREPLACES

Thank you for choosing Modern Flames, we appreciate all our customers and hope you have many years of enjoyment of our products.

Take a look at our other products
from our RPG Brands family of companies



GrandCanyonGasLogs.com

For all your indoor, outdoor gas fireplaces & fire feature products.



WildfireOutdoorLiving.com

For all your outdoor living products,
such as grills, refrigerators and accessories.

RPG BRANDS

MODERN  FLAMES®
ELECTRIC FIREPLACES

WILDFIRE
OUTDOOR LIVING

GRAND  CANYON
GAS LOGS

TruWood™ Premium Timber

52"-60", TruWood Premium Timber Kit, Large

Part Number:
TWL-52/60-SP

INSTALLATION GUIDE

TruWood Premium Timber Kit models:
OR52-MULTI, OR54-TRAD, RS-5435, LPM-5616V2, OR60-MULTI.

TruWood Premium Timber Kit includes:

- 16" Large logs (3).
- 10" Slim log (1).
- 8" Slim logs (6).
- Bag of wood chips (1).

Assembly order

You will need to gain access to the ember bed of your fireplace. Refer to your fireplace manual for instructions for removing the front glass to access the ember bed.


Please Note: This kit is designed to fit multiple fireplace sizes. Your log set might be more spread out for linear fireplaces or more compact for traditional fireplaces. If your fireplace is one of the smaller units this kit is compatible with, you may not need to use all the logs based on the available space of your fireplace.

The placement is what we recommend and what we optimized the set to, but you can have fun with them and place them to your liking. We recommend placing the bark towards the flames for the best appearance and lighting contrast.

1. Ensure the ember bed media (crystals, fireglass, etc.) that came with the fireplace is installed first. If updating an existing fireplace, remove the old logs to accommodate the TruWood logs. Then select one of the 16" logs from the kit and place it in the middle of the fireplace. This will be the base of the TruWood log layout.




2. Select the other two 16" logs and rest them on the left and right of the base log. These will create your main stack. Spread the logs out more for linear shaped fireplaces and bring them closer for traditional fireplaces.

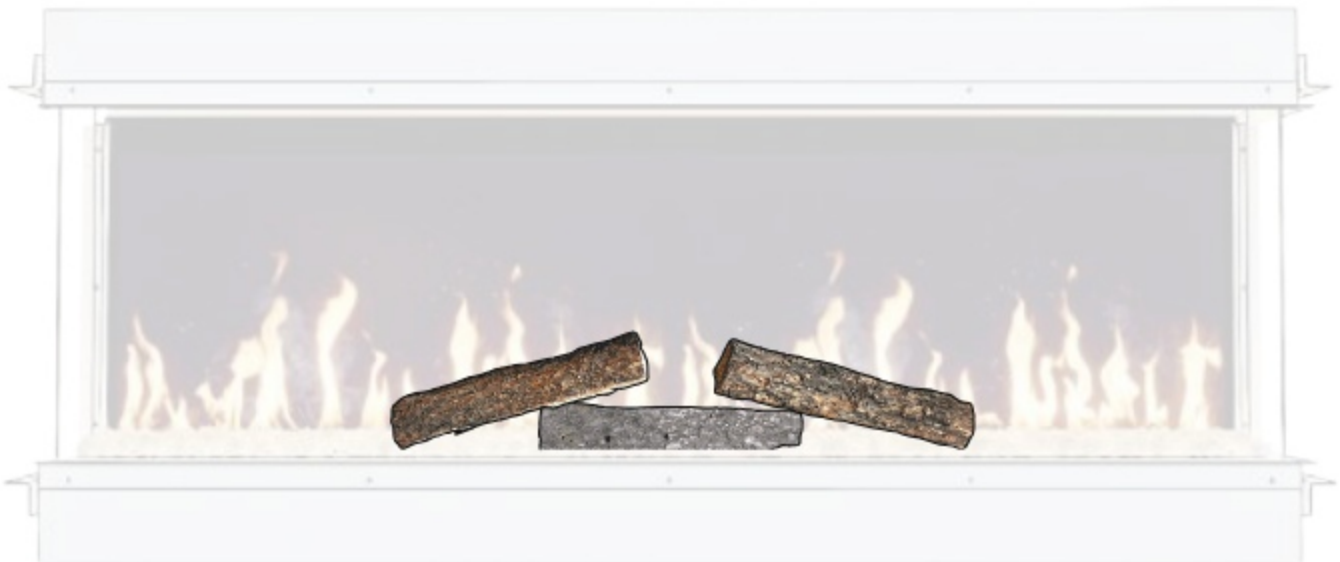

Assembly order

3. Select two 8" logs, and stack these on the ends of the 16" logs.

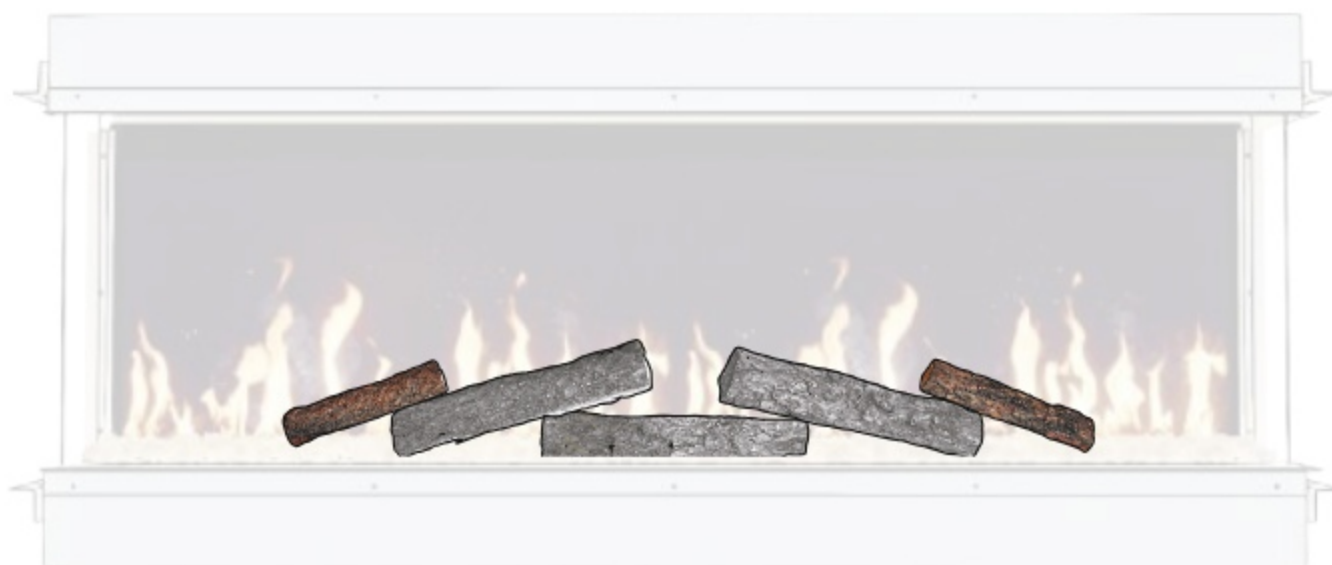

4. Select two more of the 8" logs in your kit, and lay them under the 8" logs. The inside end of the log will be towards you and the outside end will be towards the flame screen.




Assembly order

5. This step may not be needed for 52" & 54" fireplaces. If you are happy with your layout continue to next step. For 56" and 60" select the last 8" logs, and lay these on top of the 8" logs previously stacked, crossing directions where possible.




6. Select the 10" slim log and lay it across the main log diagonally.

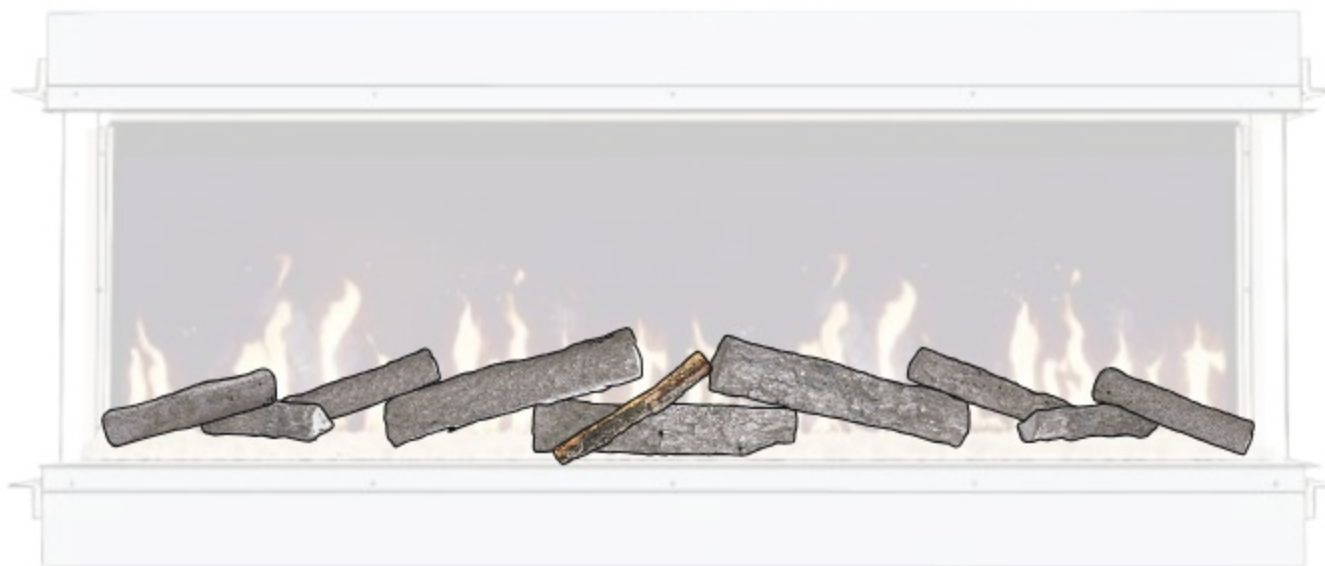

Assembly order

7. Use the bag of wood chips and place a few chips and chunks in the gaps between the logs. We recommend using these sparingly for the best appearance and to maximize the light output from the ember bed.

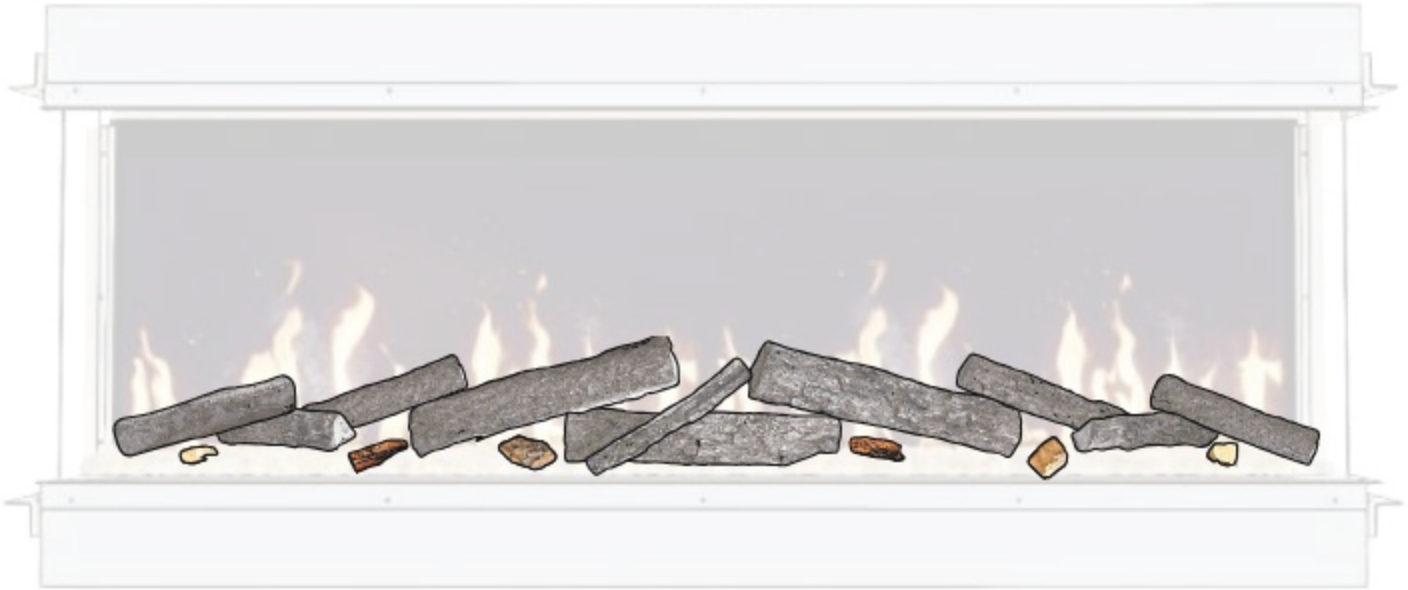

52"-60", TruWood Premium Timber Kit, Large installation is complete.

Assembly order



Condensed layout example for Redstone and Orion Traditional Units

This image shows a blank sheet of white paper with horizontal ruling lines. The lines are evenly spaced and extend across the width of the page. There are no margins, text, or other markings on the paper.

MODERN FLAMES[®] ELECTRIC FIREPLACES

Thank you for choosing Modern Flames, we appreciate all our customers and hope you have many years of enjoyment of our products.

Take a look at our other products
from our RPG Brands family of companies



GrandCanyonGasLogs.com

For all your indoor, outdoor gas fireplaces & fire feature products.



WildfireOutdoorLiving.com

For all your outdoor living products,
such as grills, refrigerators and accessories.

RPG BRANDS

MODERN  FLAMES[®]
ELECTRIC FIREPLACES

WILDFIRE
OUTDOOR LIVING

GRAND  CANYON
GAS LOGS

TruWood™ Premium Timber

68"-80", TruWood Premium Timber Kit, Large

Part Number:
TWL-68/80-SP

INSTALLATION GUIDE

TruWood Premium Timber Kit models:
LPM-6816V2, OR76-MULTI, LPM-8016V2.

TruWood Premium Timber Kit includes:

- 16" Large logs (3).
- 12" Large logs (2).
- 12" Slim logs (2).
- 10" Slim logs (2)
- 8" Slim logs (5).
- Bag of wood chips (1).

Assembly order

You will need to gain access to the ember bed of your fireplace. Refer to your fireplace manual for instructions for removing the front glass to access the ember bed.

Please Note: This kit is designed to fit multiple fireplace sizes. Your log set might be more spread out for longer fireplaces or more compact for the shorter fireplaces. If your fireplace is one of the smaller units this kit is compatible with, you may not need to use all the logs based on the available space of your fireplace.

The placement is what we recommend and what we optimized the set to, but you can have fun with them and place them to your liking. We recommend placing the bark towards the flames for the best appearance and lighting contrast.

1. Ensure the ember bed media (crystals, fireglass, etc.) that came with the fireplace is installed first. If updating an existing fireplace, remove the old logs to accommodate the TruWood logs. Then select one of the 16" logs from the kit and place it in the middle of the fireplace. This will be the base of the TruWood log layout.



2. Select the 16" logs and rest them on the left and right of the first log. These are now creating the main portion of your stack. Spreading these out more for linear shaped fireplaces and bringing these closer together for traditional shaped fireplaces.



Assembly order

3. Select the 12" large logs, and stack these on the ends of the 16" logs.



4. Select the 12" slim logs and lay them under the 12" large logs. The inside end of the log may be towards you and the outside end may be towards the flame screen.



Assembly order

5. Select the two of the 8" slim logs, and lay them under the 16" large logs previously stacked, crossing directions where possible.



6. Select two more of the 8" slim logs in your kit, and lay these over the 12" slim logs.



Assembly order

7. Select a 8" slim log and lay it across the main log diagonally.



8. Select the 10" slim logs in your kit, and stack these laying over the 12" slim logs.



Assembly order

- Use the bag of wood chips and place a few chips and chunks in the gaps between the logs. We recommend using these sparingly for the best appearance and to maximize the light output from the ember bed.



68"-80", TruWood Premium Timber Kit, Large installation is complete.

This image shows a blank sheet of white paper with horizontal ruling lines. The lines are evenly spaced and extend across the width of the page. There are no margins, text, or other markings on the paper.

MODERN FLAMES

Thank you for choosing Modern Flames, we appreciate all our customers and hope you have many years of enjoyment of our products.

Take a look at our other products
from our RPG Brands family of companies



GrandCanyonGasLogs.com

For all your indoor, outdoor gas fireplaces & fire feature products.



WildfireOutdoorLiving.com

For all your outdoor living products,
such as grills, refrigerators and accessories.

RPG BRANDS

MODERN  FLAMES
ELECTRIC FIREPLACES

EST. IN ARIZONA
WILDFIRE
OUTDOOR LIVING

GRAND CANYON
GAS  LOGS

TruWood™ Premium Timber

96"-120", TruWood Premium Timber Kit, Large

Part Number:
TWL-96/120-SP

INSTALLATION GUIDE

TruWood Premium Timber Kit models:
LPM-9616V2, OR100-MULTI, OR120-MULTI, LPM-12016V2.

TruWood Premium Timber Kit includes:

- 16" Large logs (5).
- 12" Large logs (4).
- 12" Slim logs (2).
- 10" Slim logs (7).
- 8" Slim logs (2).
- Bag of wood chips (1).

Assembly order

You will need to gain access to the ember bed of your fireplace. Refer to your fireplace manual for instructions for removing the front glass to access the ember bed.

Please Note: This kit is designed to fit multiple fireplace sizes. Your log set might be more spread out for longer fireplaces or more compact for the shorter fireplaces. If your fireplace is one of the smaller units this kit is compatible with, you may not need to use all the logs based on the available space of your fireplace.

The placement is what we recommend and what we optimized the set to, but you can have fun with them and place them to your liking. We recommend placing the bark towards the flames for the best appearance and lighting contrast.

1. Ensure the ember bed media (crystals, fireglass, etc.) that came with the fireplace is installed first. If updating an existing fireplace, remove the old logs to accommodate the TruWood logs. Then select one of the 16" logs from the kit and place it in the middle of the fireplace. This will be the base of the TruWood log layout.



2. Select two of the 16" logs and rest them on the left and right of the first log. These are now creating the main portion of your stack. Spreading these out more for linear shaped fireplaces.



Assembly order

3. Select the 12" large logs, and stack these on the ends of the 16" logs.



4. Select the 12" slim logs and stack these on the ends of the 12" big logs.



5. Select the last two of the 16" logs, and rest them on the left and right of the 12" slim logs. The 16" logs should be resting on the ember bed. Note on 96"-100" units, these logs may need to be brought in closer or not used.



Assembly order

6. Select the last two of the 12" large logs, and lay these near the 16" logs. The inside end of the log will be towards you and the outside end will be towards the flame screen. Note this step may not be needed on 96"-100" units.



7. Select 8" slim log and lay them under the 16" Side logs previously stacked, crossing directions where possible.



8. Select the 10" slim logs, and stack these laying under the 12" slim logs.



Assembly order

9. Select two 10" slim logs, and stack these laying over the 16" filler logs. The inside end of the log may be towards you and the outside end may be towards the flame screen. Note this step may not be needed on 96"-100" units.



10. Select the last two 10" slim logs, and stack these laying over the 12" large logs. The inside end of the log will face the flame screen and the outside end may be towards you. Note this step may not be needed on 96"-100" units.



11. Select 10" slim log and lay it across the main log diagonally.



Assembly order

12. Use the bag of wood chips and place a few chips and chunks in the gaps between the logs. We recommend using these sparingly for the best appearance and to maximize the light output from the ember bed.



96"-120", TruWood Premium Timber Kit, Large installation is complete.

[illegible]

MODERN FLAMES

Thank you for choosing Modern Flames, we appreciate all our customers and hope you have many years of enjoyment of our products.

Take a look at our other products
from our RPG Brands family of companies



GrandCanyonGasLogs.com

For all your indoor, outdoor gas fireplaces & fire feature products.



WildfireOutdoorLiving.com

For all your outdoor living products,
such as grills, refrigerators and accessories.

RPG BRANDS

MODERN  FLAMES
ELECTRIC FIREPLACES

EST. IN ARIZONA
WILDFIRE
OUTDOOR LIVING

GRAND CANYON
GAS LOGS